


# INSTRUCTION MANUAL

## BAGGED VACUUM CLEANER

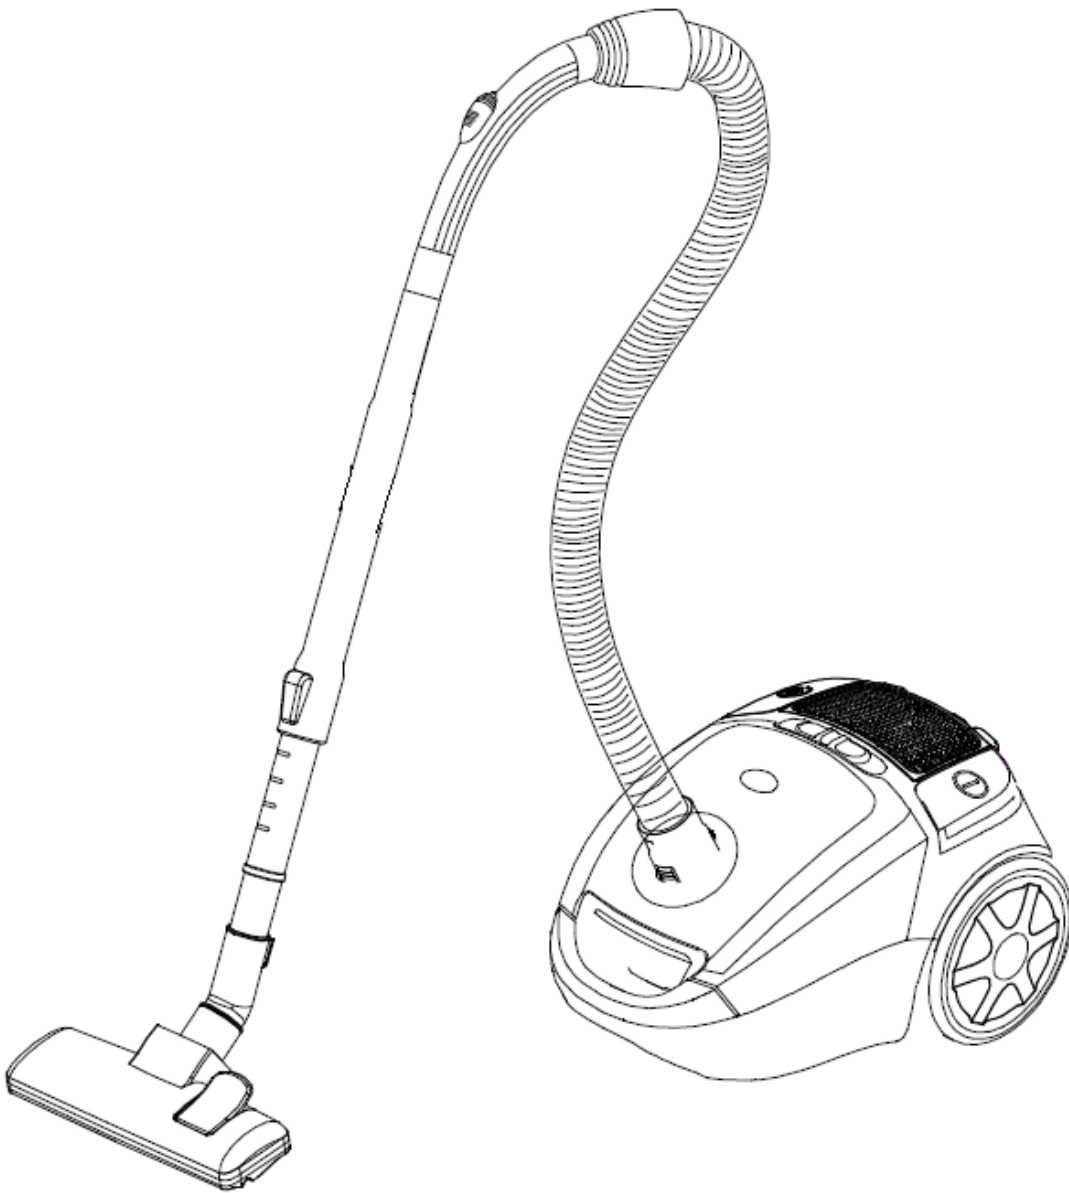

**Model No. T1400**



## **IMPORTANT SAFETY INSTRUCTIONS**

When using an electrical appliance, basic precautions should always be followed, including the following:


### **READ ALL INSTRUCTIONS BEFORE USING THE T1400 VACUUM CLEANER**

**WARNING** - To reduce the risk of fire, electric shock, or injury:

1. Do not leave vacuum cleaner when plugged in. Unplug from outlet when not in use and before servicing.
2. To reduce the risk of electric shock, do not use outdoors or on wet surfaces.
3. Use only as described in this manual. Use only manufacturers recommended attachments.
4. Do not use with damaged cord or plug. If vacuum cleaner is not working as it should, has been dropped, damaged, left outdoors, or dropped into water, have it checked at a service center.
5. Do not pull or carry by cord, use cord as a handle, close door on cord, or pull cord around sharp edges or corners. Do not run vacuum cleaner over cord. Keep cord away from heated surfaces.
6. Do not unplug by pulling on cord. To unplug, grasp the plug, not the cord.
7. Do not handle plug or vacuum cleaner with wet hands.
8. Do not put any object into openings. Do not use with any opening blocked. Keep free of dust, lint, hair and anything that may reduce airflow.
9. Keep hair, loose clothing, fingers and all parts of body away from openings and moving parts.
10. Turn off all controls before unplugging.
11. Use extra care when cleaning on stairs.
12. Do not use to pick up flammable or combustible liquids, such as gasoline, or use in areas where they may be present.
13. Hold plug when rewinding onto cord reel. Do not allow plug to whip when rewinding.
14. Unplug vacuum before connecting the hose.
15. Do not vacuum up anything that is burning or smoking, such as cigarettes, matches, or hot ashes.
16. Do not use without dust bag and/or filter in place.
17. If the supply cord is damaged, it must be replaced by the manufacturer or its service agent or a similarly qualified person in order to avoid a hazard.

**SAVE THESE INSTRUCTIONS**

## COMPONENTS AND EQUIPMENT

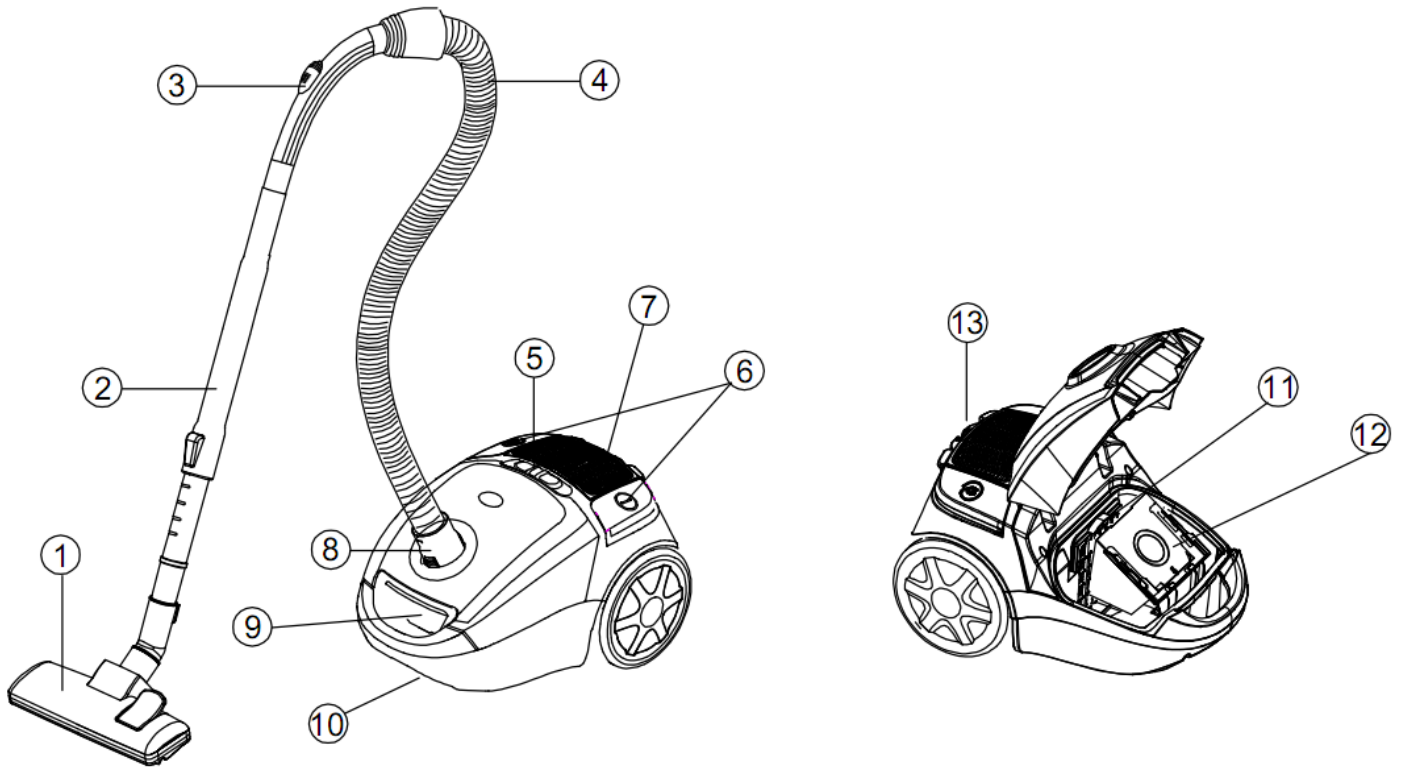


1. Floor nozzle
2. Telescopic tube
3. Air slide
4. Suction hose
5. Motor speed regulator knob
6. Automatic cord rewind
7. On/off switch
8. Suction hose connector
9. Front cover clamp plate
10. Carrying handle
11. Motor filter
12. Dust bag
13. Air exhaust plate


## PREVENTION

Switch off the vacuum cleaner immediately if the air intakes, the floor brushes or the telescopic tube become blocked. Before turning on the vacuum cleaner, remove the substance causing the blockage.


1. Never use the vacuum cleaner in the immediate vicinity of hot objects such as heaters, and do not suck up hot objects such as cigarette ends or ashes.

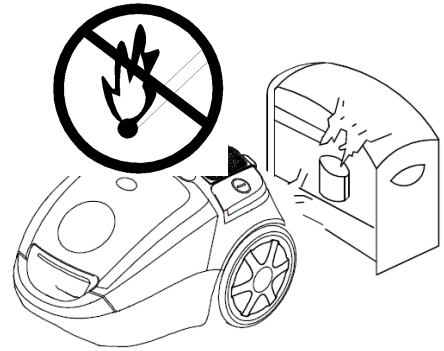


2. Only place the plug in the socket when your hands are dry.

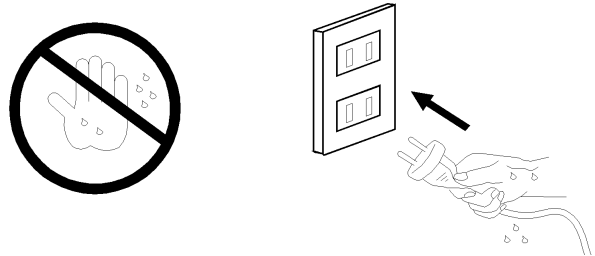

3. Remove large or sharp objects from the floor before using the vacuum cleaner to avoid any possible damage to it.

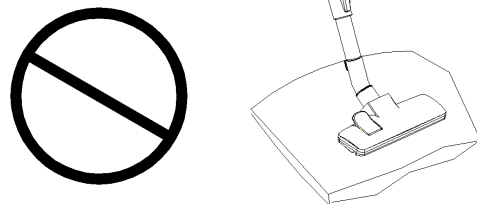


4. Do not pull by the cord when pulling out the plug.

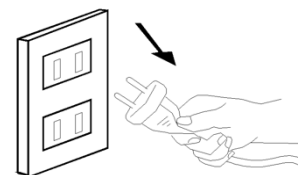

# ASSEMBLING THE VACUUM CLEANER


## 1. Assembly and Disassembly of the Hose

- **Assembly**  
Insert the hose in the air intake opening.  
Push the tube in until it locks in place.
- **Disassembly**  
Remove the hose from the air intake after unplugging the vacuum.

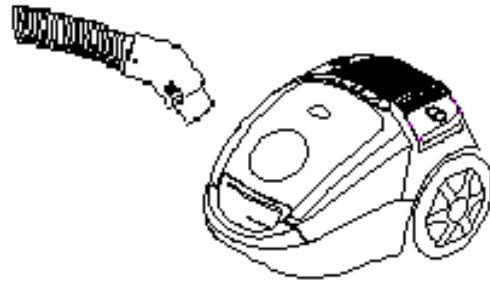


## 2. Assembling the Telescopic Tube and Accessories

2.1: Remove the telescopic tube from the hand grip.

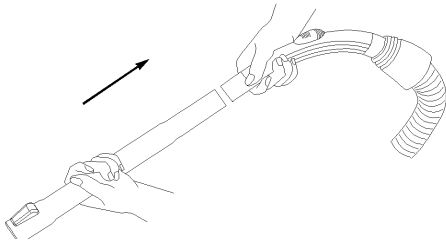


2.2:


- Set the telescopic tube to the correct length.
- Push the telescopic tube slide forward and pull out the lower part of the tube to the extension length required. Then simply let go of the slide and let it snap into place.

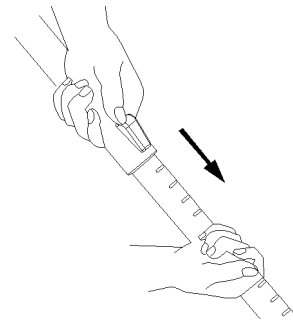


2.3: Attach the floor brush to the telescopic tube.

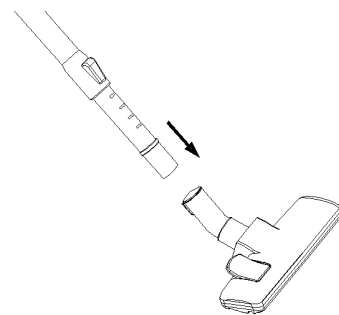

2.4: Suitable for everyday cleaning of carpets and wooden floors.

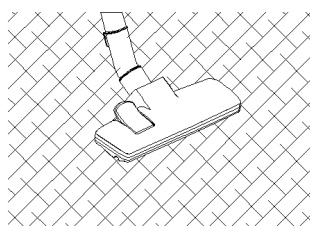

**Cleaning carpet**

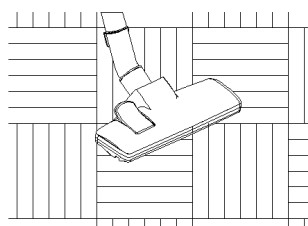


**Cleaning wooden floor**

### Crevice tool




### Upholstery tool

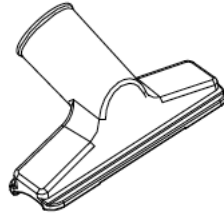

### Floor nozzle settings for carpets and tiled, wood-block or similar floors:


A: Hard floors = brush bar extended


B: Carpets = brush bar retracted

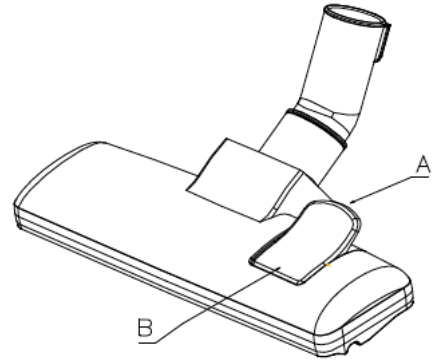


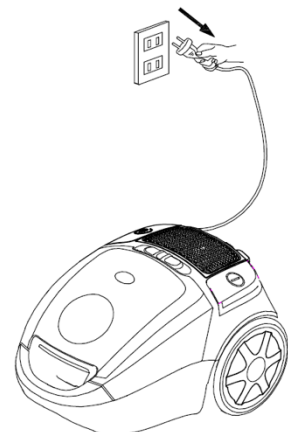
## OPERATION

### Vacuum Cleaning

1: Before using the vacuum, first roll out a sufficient length of electric flex cord and plug into the main outlet. **Do not exceed the maximum length yellow mark on the electric flex cord.** To switch on the vacuum, press the foot pedal button  on the casing with your foot.

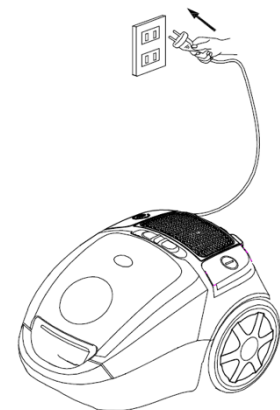

2: To rewind the power cord, press the  button with one hand and guide the cable with the other hand to ensure that it does not whip and cause damage.



## HOW TO MAINTAIN

The instructions given in this booklet serve as a guide to routine maintenance. To avoid unnecessary service calls, check the hose, bag and filter often. Clear a clogged hose with the blower, change the bag if it is full, and clean the motor filter when it is dirty.


### Disposable Dust Bags and Filters

The dust bag and motor filter play a very important roll in the efficiency of the vacuum cleaner. The purpose of the dust bag is to trap dirt, but at the same time, the paper bag must be porous enough to allow air to pass through. If the bag or the motor filter become clogged, no air can pass through the cleaner and no cleaning can take place regardless of how powerful the unit is. To keep the cleaner operating at maximum efficiency, change the dust bag frequently and clean the filter as needed. Some fine particles can restrict airflow very quickly and will decrease performance even before the bag appears to be full. For that reason, when vacuuming carpet fresheners or cleaners, powder, plaster dust, or similar fine substances, the bag and filter may need to be changed more often.


### How to Remove Dust Bag

**NOTE: Turn off vacuum and unplug the electrical cord before changing dust bag or cleaning motor filter. Never operate the vacuum cleaner without the dust bag or filter.**

1. Turn off and unplug cleaner.
2. Open bag cover by pushing latch up with fingers and lifting bag cover.
3. Locate dust bag frame handle. Raise dust bag out of dust bag compartment.

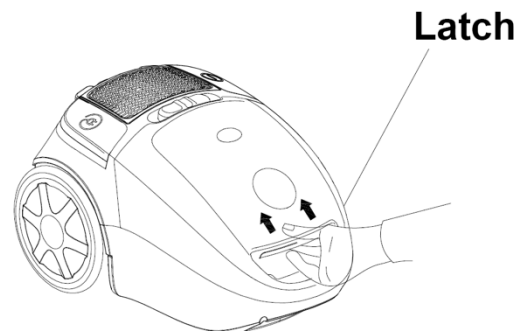




4. Remove dust bag from dust bag frame.

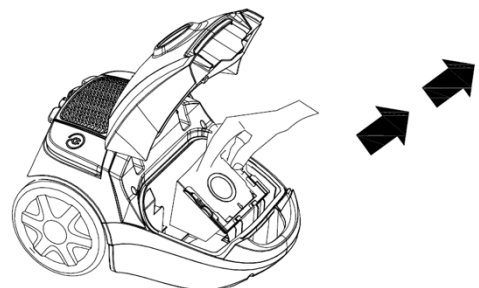

## How to Install Dust Bag

**NOTE: Turn off vacuum and unplug the electrical cord before changing dust bag or cleaning motor filter. Never operate the vacuum cleaner without the dust bag or filter.**

1. Turn off and unplug cleaner.
2. Open bag cover by pushing latch up with fingers and lifting bag cover.
3. Remove motor filter and clean by rinsing under warm water, if heavily soiled. Let completely air dry before reinstalling.
4. Open bag folds slightly.
5. Place dust bag in dust bag frame by pushing cardboard collar into ledge on dust bag frame until collar snaps into position.
6. Place dust bag frame inside dust bag compartment by placing dust bag frame into the guides at the very front of the dust bag compartment.
7. Swing bag cover lid closed and push to latch.

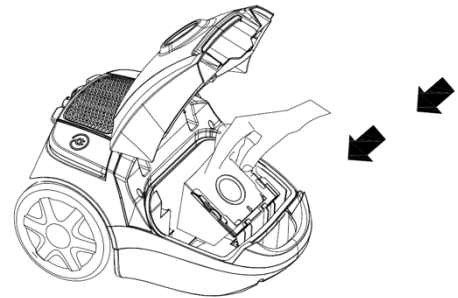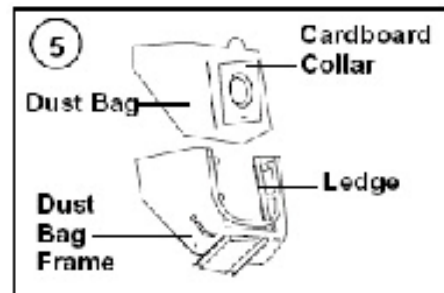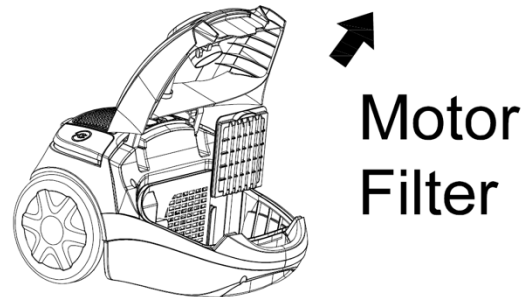

## Regulating the Suction Power

You can set the suction power on the device individually by using the suction regulator. We recommend using minimum suction power for delicate materials. Select medium suction power for mattresses, upholstered furniture and carpets. Select maximum suction power for tiled, wood and other robust floors.



## Cleaning the HEPA filter

The HEPA filter and the HEPA cover should be cleaned regularly. Cleaning is best done when replacing the dust bag. To do this, follow the instructions "How to Remove Dust Bag".

1. Switch off the vacuum cleaner and unplug the electrical cord. Always pull on the plug and not on the cord.
2. You can pull the dust bag together with the cleaning system out of their anchoring by using the carrier handle on the dust bag. Take hold of the handle on the dust bag frame and pull it upwards. Now pull the dust bag out and loosen the HEPA cover and HEPA filter out of the dust bag frame by using the lateral unlocking button.
3. Turn the dust bag cover carefully until it is released and the HEPA filter will come away easily.
4. Rinse the HEPA filter under running water and allow it to dry.
5. Place the HEPA filter back in the HEPA cover (or replace with a new one) and fit it into the dust bag frame. Then fit the dust bag frame back into position until it snaps into place. Your vacuum cleaner is now ready for use again.

## Cleaning the exhaust air filter

The exhaust air filter cleans the air a final time before it leaves the vacuum cleaner. You can clean the exhaust air filter as follows:

1. Switch off the vacuum cleaner and unplug the electrical cord. Always pull on the plug and not on the cord.
2. Open the exhaust air grill at the rear of the vacuum cleaner.
3. The exhaust air filter is visible when the grill has been opened.
4. Rinse the filter under cold running water and allow to dry.
5. Put the exhaust air filter back into place (or replace with a new one) and place in the grill.
6. Close the exhaust air filter grill.

